

# How to scan between two sets of frequencies.

## In the CPS – Optional Settings – VFO Scan

Set your start and end Frequencies

Optional Setting

Work Mode	Vox	STE	FM	Power Save	Key Function	Other	Digital Fun
Power-on	Alert Tone	Display	GPS/Ranging	<b>VFO Scan</b>	Auto repeater	Record	Volume/Audio

VFO Scan

VFO Scan Type: CO

VFO Scan Start Freq(UHF)	453.00000
VFO Scan End Freq(UHF)	459.00000
VFO Scan Start Freq(VHF)	136.00000
VFO Scan End Freq(VHF)	174.00000

OK Cancel

**Go to VFO Mode on the radio.**

**Push Programming Scan Key to start scan.**

*(You will need to set a Function Key for VFO Scan)*

P2 Short Key	VFO Scan
--------------	----------

### Scan Type: Select

CO resumes when carrier drops;

TO resumes after several seconds (regardless of carrier);

SE ends scan once a signal is found.

You might want to read “[Scanning DMR VFO Frequencies](#)”

# To Scan Frequencies outside this range.

**Enter a Frequency via the Key Pad**

**Push Scan Key to start scan.**

*(You will need to set a Function Key for Scan)*



## **TIPS**

Turning the Channel knob **left** will make the scan go **down** the Frequencies

Turning the Channel knob **right** will make the scan go **up** the Frequencies

<http://tiny.cc/AnytoneDMR>